

ESP8266

Mesh User Guide



Version 1.2
Copyright © 2016

About This Guide

This document introduces users to ESP8266 mesh network, including the following topics:

| Chapter | Title | Subject |
|-----------|---------------|--|
| Chapter 1 | Overview | Provides an overview of ESP-Mesh, including some concepts and network structure. |
| Chapter 2 | Mesh Header | Introduces the mesh header format and details about the fields and codes. |
| Chapter 3 | API Reference | Introduces the data structures and the APIs. |
| Chapter 4 | Sample Code | Provides some sample codes for mesh development. |

Release Notes

| Date | Version | Release notes |
|---------|---------|--|
| 2015.07 | V1.0 | First release. |
| 2015.09 | V1.1 | Chapter 3 added. |
| 2016.01 | V1.2 | Chapter 2 and Chapter 4 added, Chapter 1 and Chapter 3 updated. |

 **Note:**

This current version is an early release to support initial product developers. The contents are subject to change without advance notice.

Table of Contents

| | |
|---|----|
| 1. Overview | 1 |
| 1.1. Concepts | 1 |
| 1.2. Network Structure..... | 3 |
| 1.2.1. Networking Principle..... | 3 |
| 1.2.2. Networking Diagram..... | 3 |
| 1.2.3. Network Node | 4 |
| 2. Mesh Header..... | 5 |
| 2.1. Mesh Header Format | 5 |
| 2.2. Mesh Option | 7 |
| 2.2.1. Structure | 7 |
| 2.2.2. Example | 8 |
| 3. API Reference | 10 |
| 3.1. Data Structure..... | 10 |
| 3.1.1. Mesh Header Format..... | 10 |
| 3.1.2. Mesh Option Header Format | 10 |
| 3.1.3. Mesh Option Format..... | 10 |
| 3.1.4. Mesh Option Fragmentation Format | 11 |
| 3.1.5. Mesh Callback Format..... | 11 |
| 3.1.6. Mesh Scan Callback Format | 11 |
| 3.1.7. Mesh Scan User Callback Format..... | 11 |
| 3.2. Packet APIs | 11 |
| 4. Sample Code | 12 |
| 4.1. Device | 12 |
| 4.2. Mobile or Server | 12 |
| 4.3. Getting Topology..... | 13 |
| 4.4. Parsing Topology Response | 14 |
| 4.5. Dev-App..... | 15 |



1.

Overview

The development of the Internet of Things (IoT) requires an increasing number of nodes to connect to the internet. However, only limited number (usually fewer than 32) of nodes can directly connect to the same router. There are two solutions currently available for this problem.

- Super router: the higher capacity router allows more nodes to directly connect to it.
- Mesh network: the nodes can establish a network and forward packets.

ESP8266 uses mesh network as shown in Figure 1-1. As a result, a large number of nodes can connect to the internet without any improvements of the current router.

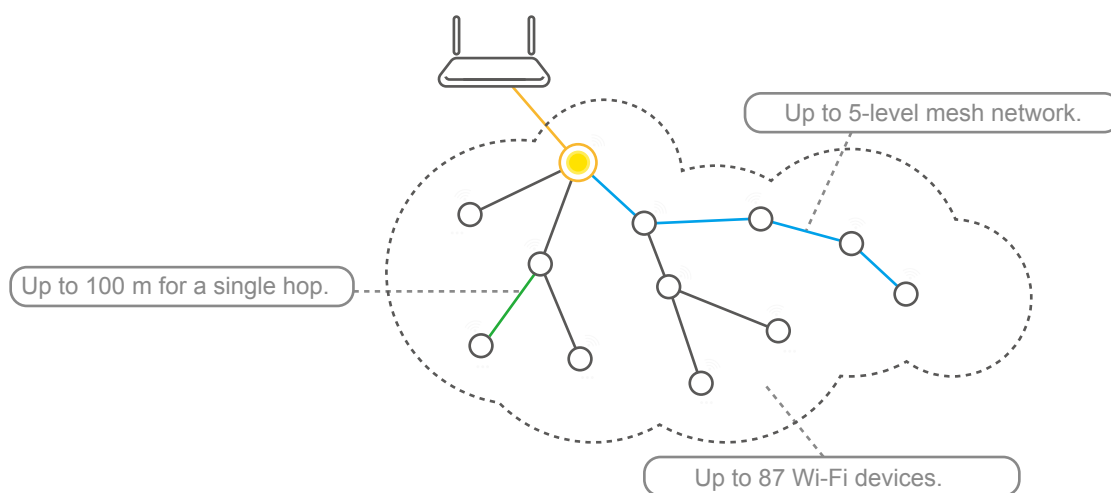


Figure 1-1. ESP-Mesh Network

1.1. Concepts

IOT Espressif App

IOT Espressif App (hereinafter referred to as IOT App) is a mobile application developed by Espressif. It can realize the local and remote control of Wi-Fi devices, including smart lights and smart plugs.

ESP-Touch

ESP-Touch is a technology developed by Espressif to connect Wi-Fi devices to the router.

Smart Config Mode for ESP-Touch

Users can configure Wi-Fi devices by ESP-Touch only when the devices are in Smart Config Mode. This status is called ESP-Touch status. For details of configuration, please refer to **1.2. Network Structure**.



Local Device

As shown in Figure 1-2, if users configure a device to connect to the router via ESP-Touch but not activate it on the server-side, then the device is a local device.

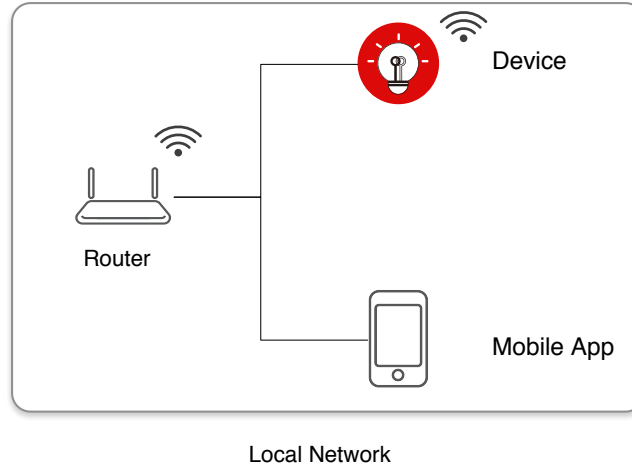


Figure 1-2. Local Network

Cloud Device

As shown in Figure 1-3, if users configure a device to connect to the router via ESP-Touch and activate it on the server-side, then the device is a cloud device.

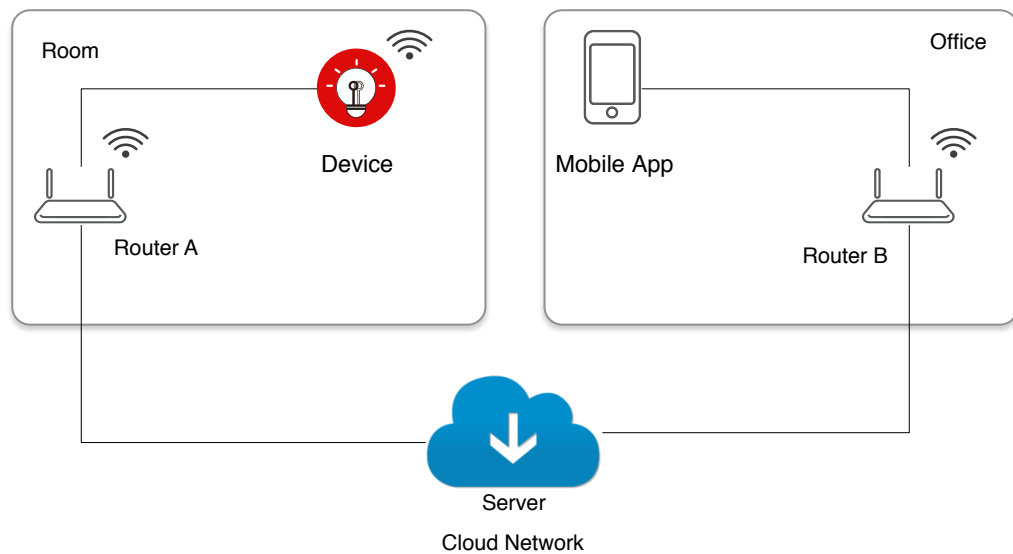


Figure 1-3. Cloud Network

There are three different statuses for a device on IOT App.

- Cloud status: The device is a cloud device that connects to a different router with IOT App.



- Online status: The device is a local device or cloud device; the device and IOT App connect to the same router.
- Offline status: The device is a cloud device that does not connect to the router.

Device Type and Status

| Device status | Cloud status | Online status | Offline status |
|---------------|--------------|---------------|----------------|
| Cloud device | ✓ | ✓ | ✓ |
| Local device | ✗ | ✓ | ✗ |

1.2. Network Structure

1.2.1. Networking Principle

Mesh network supports auto-networking. When users set up a mesh network via ESP-Touch, the device automatically scans the Wi-Fi APs nearby.

1.2.2. Networking Diagram

Figure 1-4 shows the mesh network diagram.

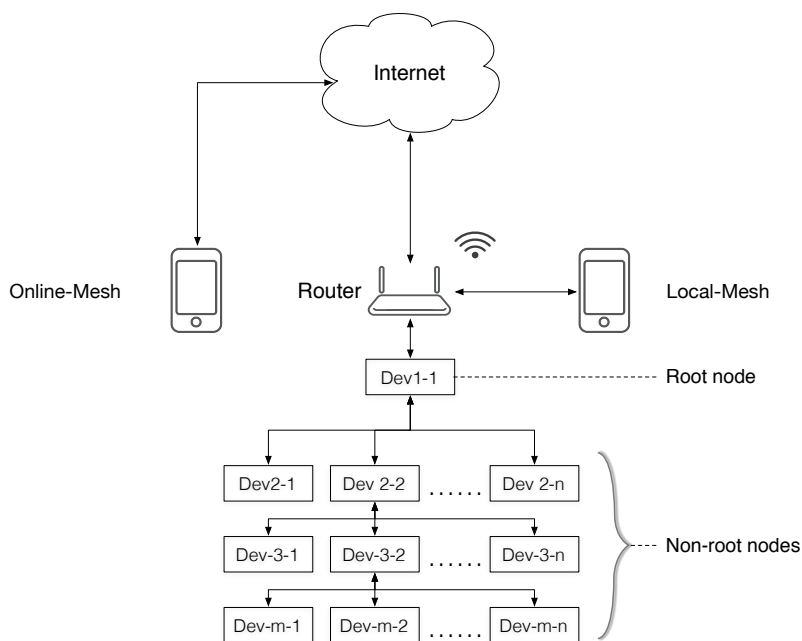


Figure 1-4. Mesh Network Diagram

- The node that directly connects to the router is the root node and others are non-root nodes. For more information, please refer to **1.2.3 Network Node**.



- Online-Mesh: When the router connects to the internet, you can use IOT App to control the Cloud Devices.
- Local-Mesh: You can only control the Local Devices through the router.

1.2.3. Network Node

According to the location in a mesh network, a node can be:

A Root Node

- It receives and sends packets.
- It forwards the packets from server, mobile apps and its child nodes.

Or,

A Non-root Node

- Non-leaf node: It receives and sends packets, as well as forwards the packets from its parent node and child nodes.
- Leaf node: It only receives and sends packets, but does not forward packets.



2. Mesh Header

2.1. Mesh Header Format

Figure 2-1 shows the mesh header format.

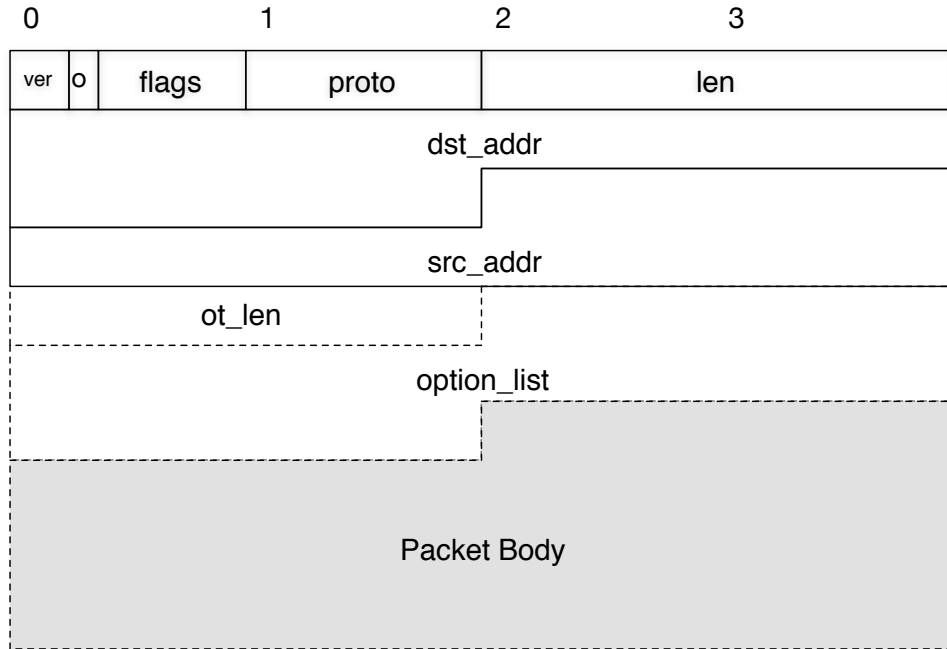


Figure 2-1. Mesh Header Format

Table 2-1 provides the definitions of the mesh header fields.

Table 2-1. Mesh Header Format

| Field Name | Length | Description | | | | | | | | | | |
|------------|-----------------------------------|---|------|---|---|---|---|----|----|------|--|--|
| ver | 2 bits | Mesh version. | | | | | | | | | | |
| o | 1 bit | Option flag. | | | | | | | | | | |
| flags | 5 bits | <div style="display: flex; align-items: center; gap: 10px;"> <div style="text-align: center;"> <small>bit</small> <table border="1" style="font-size: 8px;"> <tr><td>0</td><td>1</td><td>2</td><td>3</td><td>4</td></tr> <tr><td>CP</td><td>CR</td><td colspan="3">resv</td></tr> </table> </div> </div> | 0 | 1 | 2 | 3 | 4 | CP | CR | resv | | |
| | 0 | 1 | 2 | 3 | 4 | | | | | | | |
| | CP | CR | resv | | | | | | | | | |
| | FP | Piggyback flow permit in packet. | | | | | | | | | | |
| FR | Piggyback flow request in packet. | | | | | | | | | | | |
| resv | Reserved. | | | | | | | | | | | |



| Field Name | Length | Description |
|-------------|---|--|
| proto | 8 bits | <div style="text-align: center;"> bit 0 1 2 3 4 5 6 7 </div> |
| | D | The direction of packet: <ul style="list-style-type: none"> • 0: downwards • 1: upwards |
| | P2P | Node to Node packet. |
| | protocol | Protocol used by user data. |
| | mesh_usr_proto_type is defined as bellow. <pre>enum mesh_usr_proto_type { M_PROTO_NONE = 0, // used to deliver mesh management packet M_PROTO_HTTP, // user data in HTTP protocol format M_PROTO_JSON, // user data in JSON protocol format M_PROTO_MQTT, // user data in MQTT protocol format M_PROTO_BIN, // user data is binary stream };</pre> | |
| len | 2 Bytes | The length of mesh packet in bytes (mesh header included). |
| dst_addr | 6 Bytes | Destination address <ul style="list-style-type: none"> • proto.D = 0 or proto.P2P = 1 : dst_addr represents the MAC address of destination device. • Bcast or mcast packet: dst_addr represents the bcast or mcast MAC address. • proto.D = 1 and proto.P2P = 0: dst_addr represents the destination IP and port of Mobile or Server. |
| src_addr | 6 Bytes | Source address <ul style="list-style-type: none"> • proto.P2P = 1: src_addr represents the MAC address of source device • Bcast or mcast packet : src_addr represents the MAC address of source device • proto.D = 1: src_addr represents the MAC address of source device • proto.D = 0 and forward packet into mesh: src_addr represents the IP and port of Mobile or Server |
| ot_len | | Represents the total length of options (including itself). |
| option_list | | The element list of options. <div style="text-align: center;"> </div> |
| otype | 1 Byte | Option type. |



| Field Name | Length | Description |
|------------|--------------|-------------------------------|
| olen | 1 Byte | The length of current option. |
| ovlaue | User defined | The value of current option. |

2.2. Mesh Option

2.2.1. Structure

The mesh option type is defined by the structure of mesh_option_type.

```
enum mesh_option_type {
    M_O_FLOW_REQ = 0, //flow request option
    M_O_FLOW_RESP, //flow response option
    M_O_ROUTER_SPREAD, //router information spread option
    M_O_ROUTE_ADD, //route table update (node joins mesh) option
    M_O_ROUTE_DEL, //route table update (node exits mesh) option
    M_O_TOPO_REQ, //topology request option
    M_O_TOPO_RESP, //topology response option
    M_O_MCAST_GRP, //group list of mcast
    M_O_MESH_FRAG, //mesh management fragmentation option
    M_O_USR_FRAG, //user data fragmentation
    M_O_USR_OPTION, //user option
};
```

Table 2-2. Mesh Header Type

| Field Name | Length | Description | Format | | | |
|-------------------------|-------------|--|--|------|--------|--------------------|
| M_O_FLOW_REQ | 2 Bytes | Used for flow request. | otype olen ovalue <table border="1" style="display: inline-table; vertical-align: middle;"> <tr> <td style="width: 40px;">0x00</td> <td style="width: 40px;">0x02</td> </tr> </table> | 0x00 | 0x02 | |
| 0x00 | 0x02 | | | | | |
| M_O_FLOW_RESP | 6 Bytes | Used to respond to flow. | otype olen ovalue <table border="1" style="display: inline-table; vertical-align: middle;"> <tr> <td style="width: 40px;">0x01</td> <td style="width: 40px;">0x06</td> <td style="width: 100px;">congest capacity</td> </tr> </table> | 0x01 | 0x06 | congest capacity |
| 0x01 | 0x06 | congest capacity | | | | |
| M_O_ROUTER_SPREAD AD | 106 Bytes | Used to spread information of router. | otype olen ovalue <table border="1" style="display: inline-table; vertical-align: middle;"> <tr> <td style="width: 40px;">0x02</td> <td style="width: 40px;">0x6A</td> <td style="width: 100px;">Router information</td> </tr> </table> | 0x02 | 0x6A | Router information |
| 0x02 | 0x6A | Router information | | | | |
| M_O_ROUTE_ADD | 6*n+2 Bytes | Used to update route table when new node joins mesh network. | otype olen ovalue <table border="1" style="display: inline-table; vertical-align: middle;"> <tr> <td style="width: 40px;">0x03</td> <td style="width: 40px;">length</td> <td style="width: 100px;">MAC address list</td> </tr> </table> | 0x03 | length | MAC address list |
| 0x03 | length | MAC address list | | | | |
| M_O_ROUTE_DEL | 6*n+2 Bytes | Used to update route table when node exits mesh network. | otype olen ovalue <table border="1" style="display: inline-table; vertical-align: middle;"> <tr> <td style="width: 40px;">0x04</td> <td style="width: 40px;">length</td> <td style="width: 100px;">MAC address list</td> </tr> </table> | 0x04 | length | MAC address list |
| 0x04 | length | MAC address list | | | | |



| Field Name | Length | Description | Format | | | | | | |
|---------------|-------------|--|--|-------|------|--------|------|--------|------------------------------------|
| M_O_TOPO_REQ | 8 Bytes | Used to get topology of mesh network. | <table border="1"> <tr> <td>otype</td> <td>olen</td> <td>ovalue</td> </tr> <tr> <td>0x05</td> <td>0x06</td> <td>MAC address of the device searched</td> </tr> </table> | otype | olen | ovalue | 0x05 | 0x06 | MAC address of the device searched |
| otype | olen | ovalue | | | | | | | |
| 0x05 | 0x06 | MAC address of the device searched | | | | | | | |
| M_O_TOPO_RESP | 6*n+2 Bytes | Used to respond to topology of mesh network. | <table border="1"> <tr> <td>otype</td> <td>olen</td> <td>ovalue</td> </tr> <tr> <td>0x06</td> <td>length</td> <td>MAC address list</td> </tr> </table> | otype | olen | ovalue | 0x06 | length | MAC address list |
| otype | olen | ovalue | | | | | | | |
| 0x06 | length | MAC address list | | | | | | | |

2.2.2. Example

Flow Request Packet

```

0 1 2 3 4 5 6 7 8 9 a b c d e f
00000000h: 04 01 14 00 18 FE 34 A5 3B AD 18 FE 34 A2 C7 76
00000010h: 04 00 00 02

```

Table 2-3. Flow Request Packet

| Field Name | Value | Description |
|---------------------------|-------------------|------------------------------------|
| head.ver | 00 | Current version of mesh is 00. |
| head.O | 1 | The option exists in this packet. |
| head.flags.FP | 0 | Without piggyback flow permit. |
| head.flags.FR | 0 | Without piggyback flow request. |
| head.flags.resv | 000 | Reserved. |
| head.proto.D | 1 | Upwards. |
| head.proto.P2P | 0 | Without node to node packet. |
| head.proto.protocol | 000000 | Mesh management packet. |
| head.len | 0x0014 | The length of packet is 20 Bytes. |
| head.dst_addr | 18 FE 34 A5 3B AD | MAC address of destination device. |
| head.src_addr | 18 FE 34 A2 C7 76 | MAC address of source device. |
| head.ot_len | 0x0004 | The option length is 0x0004. |
| head.option_list[0].otype | 0x00 | M_FLOW_REQ. |
| head.option_list[0].olen | 0x02 | The option length is 0x02. |

Flow Response Packet

```

0 1 2 3 4 5 6 7 8 9 a b c d e f
00000000h: 04 00 18 00 18 FE 34 A2 C7 76 18 FE 34 A5 3B AD
00000010h: 08 00 01 06 01 00 00 00

```



Table 2-4. Flow Response Packet

| Field Name | Value | Description |
|----------------------------|-------------------|--|
| head.ver | 00 | Current version of mesh is 00. |
| head.O | 1 | The option exists in this packet. |
| head.flags.FP | 0 | Without piggyback flow permit. |
| head.flags.FR | 0 | Without piggyback flow request. |
| head.flags.resv | 000 | Reserved. |
| head.proto.D | 0 | Downwards. |
| head.proto.P2P | 0 | Without node to node packet. |
| head.proto.protocol | 000000 | Mesh management packet. |
| head.len | 0x0015 | The length of packet is 21 Bytes. |
| head.dst_addr | 18 FE 34 A2 C7 76 | MAC address of destination device. |
| head.src_addr | 18 FE 34 A5 3B AD | MAC address of source device. |
| head.ot_len | 0x0008 | The option length is 0x0008. |
| head.option_list[0].otype | 0x01 | M_FLOW_RESP. |
| head.option_list[0].olen | 0x06 | The option length is 0x06. |
| head.option_list[0].ovalue | 0x01 | Option value is 0x00000001, flow capacity is 0x00000001. |



3. API Reference

3.1. Data Structure

3.1.1. Mesh Header Format

```
struct mesh_header_format {
    uint8_t ver:2;           // version of mesh
    uint8_t oe: 1;          // option flag
    uint8_t fp: 1;          // piggyback flow permit in packet
    uint8_t fr: 1;          // piggyback flow request in packet
    uint8_t rsv:3;          // reserved
    struct {
        uint8_t d: 1;       // direction, 1:upwards, 0:downwards
        uint8_t p2p:1;      // node to node packet
        uint8_t protocol:6; // protocol used by user data
    } proto;
    uint16_t len;            // packet total length
    (mesh header included)
    uint8_t dst_addr[ESP_MESH_ADDR_LEN]; // destination address
    uint8_t src_addr[ESP_MESH_ADDR_LEN]; // source address
    struct mesh_header_option_header_type option[0]; // mesh option
} __packed;
```

3.1.2. Mesh Option Header Format

```
struct mesh_header_option_header_type {
    uint16_t ot_len;        // option total length
    struct mesh_header_option_format olist[0]; // option list
} __packed;
```

3.1.3. Mesh Option Format

```
struct mesh_header_option_format {
    uint8_t otype;         // option type
    uint8_t olen;          // current option length
}
```



```
uint8_t ovalue[0]; // option value
} __packed;
```

3.1.4. Mesh Option Fragmentation Format

```
struct mesh_header_option_frag_format {
    uint16_t id; // identity of fragmentation
    struct {
        uint16_t resv:1; // reserved
        uint16_t mf:1; // more fragmentation
        uint16_t idx:14; // fragmentation offset
    } offset;
} __packed;
```

3.1.5. Mesh Callback Format

```
typedef void (* espconn_mesh_callback)(int8_t result);
```

3.1.6. Mesh Scan Callback Format

```
typedef void (* espconn_mesh_scan_callback)(void *arg, int8_t
status);
```

3.1.7. Mesh Scan User Callback Format

```
typedef void (* espconn_mesh_usr_callback)(void *arg);
```

3.2. Packet APIs

Note:

For the packet APIs, please refer to **ESP8266 Non-OS SDK API Guide** via the following link:
<http://www.espressif.com/en/support/download/documents#overlay=en/admin/content>.



4. Sample Code

4.1. Device

For details, please refer to:

[ESP8266_MESH_DEMO/blob/master/mesh_demo/demo/mesh_demo.c](https://github.com/espressif/ESP8266_MESH_DEMO/blob/master/mesh_demo/demo/mesh_demo.c).

4.2. Mobile or Server

```
void controller_entrance(Parameter list)
{
    /*Add your codes to check status*/
    /*Add your codes to build control packet*/
    uint8_t json_control_data[] = { /*Add your codes*/ };
    uint16_t control_data_len = sizeof(json_control_data)
    struct mesh_header_format *mesh_header = NULL;

    /* src_addr should be the combination of IP and port of
    Mobile or Server. You can set the address to zero, then the
    root device will fill in the section. If you fill in the
    section by yourself, please make sure the value is right.*/
    uint8_t src_addr[] = {0,0,0,0,0,0},
    dst_addr[] = {xx,xx,xx,xx,xx,xx};

    mesh_header = (struct mesh_header_format
    *)espsconn_mesh_create_packet(dst_addr, src_addr, false, true,
    M_PROTO_JSON, control_data_len,
    false, 0, false, 0, false, 0, 0);
    if (!mesh_header)
    {
        printf("alloc resp packet fail\n");
        return;
    }
    if (espsconn_mesh_set_usr_data(mesh_header,
    resp_json_packet_body, resp_data_len))
    {
        printf("set user data fail\n");
    }
}
```



```
        free(mesh_header);
        return;
    }
    // sent control packet
    espconn_mesh_sent(esp, mesh_header, mesh_header->len);
    free(mesh_header);
}
```

4.3. Getting Topology

```
void topology_entrance(Parameter list)
{
    /*Add your codes to check status*/
    /*Add your codes to build getting topology packet*/
    bool res;
    struct mesh_header_format *mesh_header = NULL;
    struct mesh_header_option_format *topo_option = NULL;
    uint8_t src_addr[] = {0,0,0,0,0,0};
    uint8_t dst_addr[] = {xx,xx,xx,xx,xx,xx}; // MAC address of root
device
    uint8_t dev_mac[6] = {xx,xx,xx,xx,xx,xx}; // zero represents
topology of all devices
    uint16_t ot_len = sizeof(*topo_option) + sizeof(struct
mesh_header_option_header_type) + sizeof(dev_mac);
    mesh_header = (struct mesh_header_format
*)espconn_mesh_create_packet(
    dst_addr, src_addr, false, true, M_PROTO_NONE, 0,
    true, ot_len, false, 0, false, 0, 0);
    if (!mesh_header) {
        printf("alloc resp packet fail\n");
        return;
    }
    topo_option = (struct mesh_header_option_format
*)espconn_mesh_create_option(
    M_O_TOPO_REQ, dev_mac, sizeof(dev_mac));
```




```
    if (!topo_option) {
        printf("alloc topo option fail\n");
        free(mesh_header);
        return;
    }
    res = espconn_mesh_add_option(mesh_header, topo_option);
    free(topo_option);
    if (res) {
        printf("add topo option fail\n");
        free(mesh_header);
        return;
    }
    // send packet of getting topology
    espconn_mesh_sent(esp, mesh_header, mesh_header->len);
    free(mesh_header);
}
```

4.4. Parsing Topology Response

```
void topology_parser_entrance(uint8_t *topo_resp, uint16_t len)
{
    /*Add your codes to check parameter*/
    uint16_t oidx = 1;
    struct mesh_header_format *mesh_header = NULL;
    struct mesh_header_option_format *topo_option = NULL;
    mesh_header = (struct mesh_header_format *)topo_resp;
    if (!mesh_header->oe) {
        printf("no option exist\n");
        return;
    }
    /* you need parse all the options one by one in the packet header
    */
    while(espconn_mesh_get_option(mesh_header, M_O_TOPO_RESP,
    oidx++, &topo_option)) {
```



```
        uint16_t dev_count = topo_option->olen/6;
        process_dev_list(topo_option->ovalue, dev_count);
    }
}
```

4.5. Dev-App

For details of the example codes, please refer to:

- [ESP8266_MESH_DEMO/blob/master/mesh_demo/include/user_config.h](https://github.com/espressif/ESP8266_MESH_DEMO/blob/master/mesh_demo/include/user_config.h)
- [ESP8266_MESH_DEMO/blob/master/mesh_demo/demo/mesh_demo.c](https://github.com/espressif/ESP8266_MESH_DEMO/blob/master/mesh_demo/demo/mesh_demo.c)



Espressif IOT Team
www.espressif.com

Disclaimer and Copyright Notice

Information in this document, including URL references, is subject to change without notice.

THIS DOCUMENT IS PROVIDED AS IS WITH NO WARRANTIES WHATSOEVER, INCLUDING ANY WARRANTY OF MERCHANTABILITY, NON-INFRINGEMENT, FITNESS FOR ANY PARTICULAR PURPOSE, OR ANY WARRANTY OTHERWISE ARISING OUT OF ANY PROPOSAL, SPECIFICATION OR SAMPLE.

All liability, including liability for infringement of any proprietary rights, relating to use of information in this document is disclaimed. No licenses express or implied, by estoppel or otherwise, to any intellectual property rights are granted herein.

The Wi-Fi Alliance Member logo is a trademark of the Wi-Fi Alliance. The Bluetooth logo is a registered trademark of Bluetooth SIG.

All trade names, trademarks and registered trademarks mentioned in this document are property of their respective owners, and are hereby acknowledged.

Copyright © 2016 Espressif Inc. All rights reserved.